



Trap Sensor User Guide

support@celltracktech.com

4/1/2021

Contents

Introduction	1
SensorStation Setup	1
TrapSensor Setup	2
Attaching Your Trap Sensor	3
SensorStation Pairing	3
Operation Tips	3
Test Transmit	3
Over the Air Configuration	3
Entering Coverage Area Testing Mode	3
Technical Specifications	4
LED Pulse Patterns	4
Coverage Area Testing Mode LED Patterns	4
Final Thoughts	5

Introduction

The Trap Sensor is an ultra low power, long range motion detector that signals the SensorStation whenever movement is detected, such as the force from an animal trap, cage door closure, or mist net.

The sensitivity level, as well as other parameters, can be configured at time of manufacture. It also can be configured through the trap sensor web interface.

The Trap Sensor makes use of LoRa modulation on the 902-928MHz unlicensed band. Other frequencies and modulations, such as 434MHz FSK (compatible with LifeTag and PowerTag infrastructure) are available on request.

Under normal motion conditions, usage, and signal levels, the Trap Sensor battery will last about a year.

SensorStation Setup

If you are making use of anything other than 434MHz FSK, you will need to use a special receiver dongle. This dongle must be plugged into USB Port 4, otherwise the receiver will not be able to communicate with the installed software. If it has not been pre-installed, you will also need to install the Trap Sensor Receiver Software.



Figure 1: *Trap Sensor LoRa Radio*

If you have a Trap Sensor Receiver and received one of our custom drilled cases, an additional antenna port will be provided.

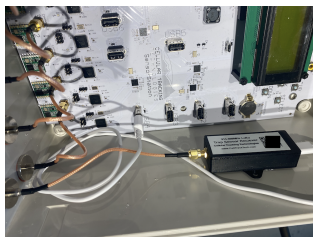


Figure 2: *LoRa radio installed in SensorStation*

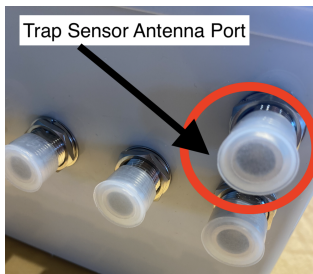


Figure 3: *Bottom of SensorStation showing Trap Sensor Antenna Port*

Make sure the coaxial connection is connected to your Trap Sensor Receiver, otherwise, the signal will not be received. Connect this Trap Sensor Receiver coaxial antenna to a quality 915MHz antenna (902-928MHz ISM antennas are fine), and place the antenna as high as practically possible. The higher the antenna, the greater the range, as the signal is near line of sight.



Figure 4: *Trap Sensor*

TrapSensor Setup

Open up the plastic case with a phillips screwdriver. Inside, you will see a circuit board with battery holder. Insert two AA alkaline batteries. Since battery capacities and chemistries vary wildly across battery manufacturers, only the following brands are recommended:

- ACDelco
- Ikea
- Duracell
- AmazonBasics

Rechargeable batteries, “Energizer” brand, and lithium batteries are not recommended.

Once batteries are inserted into the device, it is ready for use. The LED will shine for 10 seconds, indicating that power has been applied to the device. For more information LED flash meanings, please see the LED indicator chart.

After a short bootup process, and transmission of a “Hello” message to the SensorStation, the device is now armed. Any movement from this point on will result in a radio transmission if the movement threshold is reached.

Make sure that the top is securely attached after installing batteries. While the case is water proof, it is not submersion proof.

It is also good to give the Trap Sensor a shake (similar to the conditions experienced in a real event) and verify it appears on the SensorStation.

Attaching Your Trap Sensor

The Trap Sensor can be attached using a variety of methods:

- Placing zip ties through the holes and around the structure of the wire cage
- Using screws for wood, plastics, and some metals

SensorStation Pairing

Trap Sensors do not need to be paired with the SensorStation. They are ready for use once deployed. Multiple overlapping receiving networks are possible.

Operation Tips

Excessive vibration, wind, and other movements can result in errant motion transmissions as well as additional power consumption. While some of these situations are unavoidable, it is important to keep an eye on battery levels until you baseline the power consumption. It is also advised to place batteries while in field

to avoid any inadvertent transmissions before deployment. Constant movement, such as during transport, can reduce the battery life.

Test Transmit

If you wish to force the trap sensor to transmit while in normal operation mode, press the button and hold for a few seconds. The device will transmit as if it received a motion event.

Over the Air Configuration

After each trap triggering, either by button or by motion, the trap sensor remains on the air for a short period of time waiting for configuration settings to be updated. If no signal is found, the device goes back to sleep and re-arms automatically.

Entering Coverage Area Testing Mode

The trap sensor can enter a coverage area testing mode on startup. Simply press the button on the device, insert the batteries, and wait until a fading pattern appears. This means the device will enter test mode shortly.

Test mode transmits at a 50% duty cycle about once a second, waiting for an “ACK” or acknowledgment from the SensorStation that the message has been received. This is important to be able to test bi-directional communication. As long as the light remains on, it is in a good coverage area. If the light goes out, try to reposition the device and wait for the light to appear.

NOTE: A device in Coverage Area Testing Mode will consume all bandwidth on the configured radio channel. It is advised to only do this during deployment. Be mindful that other devices may not be able to transmit their trap signals if a device is in this mode.

To exit Coverage Area Testing Mode, remove the batteries, and replace them.

Technical Specifications

- LoRa (Long Range) Chirp Spread Spectrum Transmitter
- Can be programmable with user software using standard AVR Studio and Arduino development environments
- 902-928MHz LoRa (standard), 868MHz (Optional), 434MHz LifeTag/PowerTag Compatible (Optional), 434MHz loRa (optional)
- Omnidirectional motion detector
- Factory configurable thresholds, transmission intervals, re-arming time
- Over-the-Air updatable configuration settings
- ATmega328PB low power microprocessor
- 6 pin ICSP programming header
- WatchDog timer for extra reliability
- FTDI serial programmer/debugger pinout
- Battery voltage detection circuit
- Unique identifier burnt into each processor IC
- Test button
- Coverage area testing mode

LED Pulse Patterns

LED Pattern	Meaning
10 seconds	Device boot up or reboot
Fading in 5 times	Device was commanded to enter Coverage Area Testing Mode with button press at boot
Flashing 3 times (100ms)	Occurs during bootup and indicates a custom configuration was loaded from EEPROM memory
Single flash (100ms)	Occurs during bootup and indicates default configuration is loaded
Flashing goes from fast to slow	Radio configuration problem
Flashing goes from slow to fast	Frequency provisioning error
Slow flash (5x at 500ms)	Maximum transmission retries, SensorStation did not acknowledge
2 flashes at 100ms	Message confirmed from SensorStation

Coverage Area Testing Mode LED Patterns

LED Pattern	Meaning
Constant Solid LED	Device in coverage area
No LED	Device outside coverage area

Note that it will take a few seconds for the device to detect the presence or absence of the coverage area. It also does consume a bit of power, so be sure to use fresh batteries when you ultimately deploy the device.

Final Thoughts

This User Guide is a living document. Your experiences and input are greatly appreciated so please don't hesitate to reach out to us regarding what you'd like to see included here. You can submit your suggestions and any errors to our **Customer Service Desk** here and we will work to incorporate them in future revisions. All material © Cellular Tracking Technologies, 2022.